

Polypropylene Coveralls

Protection Against Dust, Dirt & Grime

Protection

• Polypropylene coveralls offer protection against general dust, dirt and grime.

Feature & Benefits

- Fully elasticated hood, wrists and ankles for maximum comfort and protection.
- Gusseted hood provides additional comfort and ease of head movement.
- Full body zipper makes donning easy.
- · Generous sizing for ease of movement and comfort when bending, reaching or squatting.
- Excellent breathability allowing moisture vapour to pass through the material to keep the wearer comfortable.

Common Areas of Use

· Painting, light industrial, general maintenance, building and plumbing

Fabric Construction


50 GSM Spunbond Polypropylene



Spunbond Polypropylene

Understanding the Label

 All SureShield™ coveralls contain important information on the neck label which you should read before using the product. Below is a guide for interpreting the label.

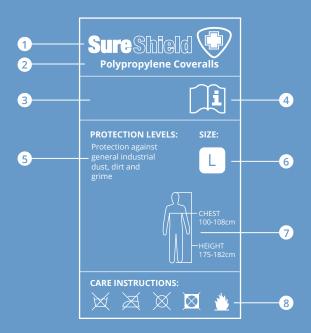


- 1. Coverall brand name
- 2. Model identification
- 3. CE Marking confirms Category III approval by INSPEC International Ltd (if applicable).
- 4. Read this instruction sheet before use.
- 5. Full body protection types (if applicable).
- 6. Size
- 7. Sizing pictogram showing body measurements.
- 8. Care Instructions: do not wash, iron, dry clean or tumble dry. Stay away from flames or intense heat.

Sizing

 Use the table below to determine the most appropriate size for you.

SIZE s	CHEST (cm) 106 - 114	HEIGHT (cm) 168 - 172
М	116 - 124	173 - 177
	126 - 134	178 - 182
XL	136 - 144	183 - 187
2XL	146 - 154	188 - 192
3XL	156 - 164	193 - 197
4XL	166 - 174	198 - 202

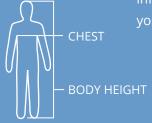

Information

Storage

• SureShield™ coveralls should be stored in dry areas away from direct sunlight.

Disposal

 SureShield™ coveralls can normally be disposed of in landfill or incinerated.
Restrictions may apply depending on the contaminant encountered during use. Check with your local council for further details.

Warnings

- Where SureShield™ coveralls are used in conjunction with other PPE it may be necessary to tape cuffs to gloves, ankles to boots and hood to respiratory devices in order to achieve full "Type" protection. The user shall be the sole judge of correct combination of PPE and coveralls.
- Wearing coveralls, like many forms of PPE, can lead to heat stress. It is recommended that users adequately hydrate and take regular breaks to ensure dehydration and heat stress does not occur.
- When removing coveralls users should take care to avoid contamination by any hazardous substances encountered while wearing the coveralls. If coveralls are contaminated then standard decontamination procedures should be followed (i.e. decontamination shower).
- The user is responsible for ensuring the appropriate use of SureShield™ coveralls and no responsibility will be taken for improper use. Contact your SureShield™ provider for information about the correct product for your job.

